


NATE !

MAKE SURE SUMP INSTALLED

ALL PVC LINES ASIDE OF ONE 2" RISER CAPPED OFF !!

CAP OFF AND INSULATE ALL WATER LINES - INSULATE WITH 1' THROUGH CONCRETE

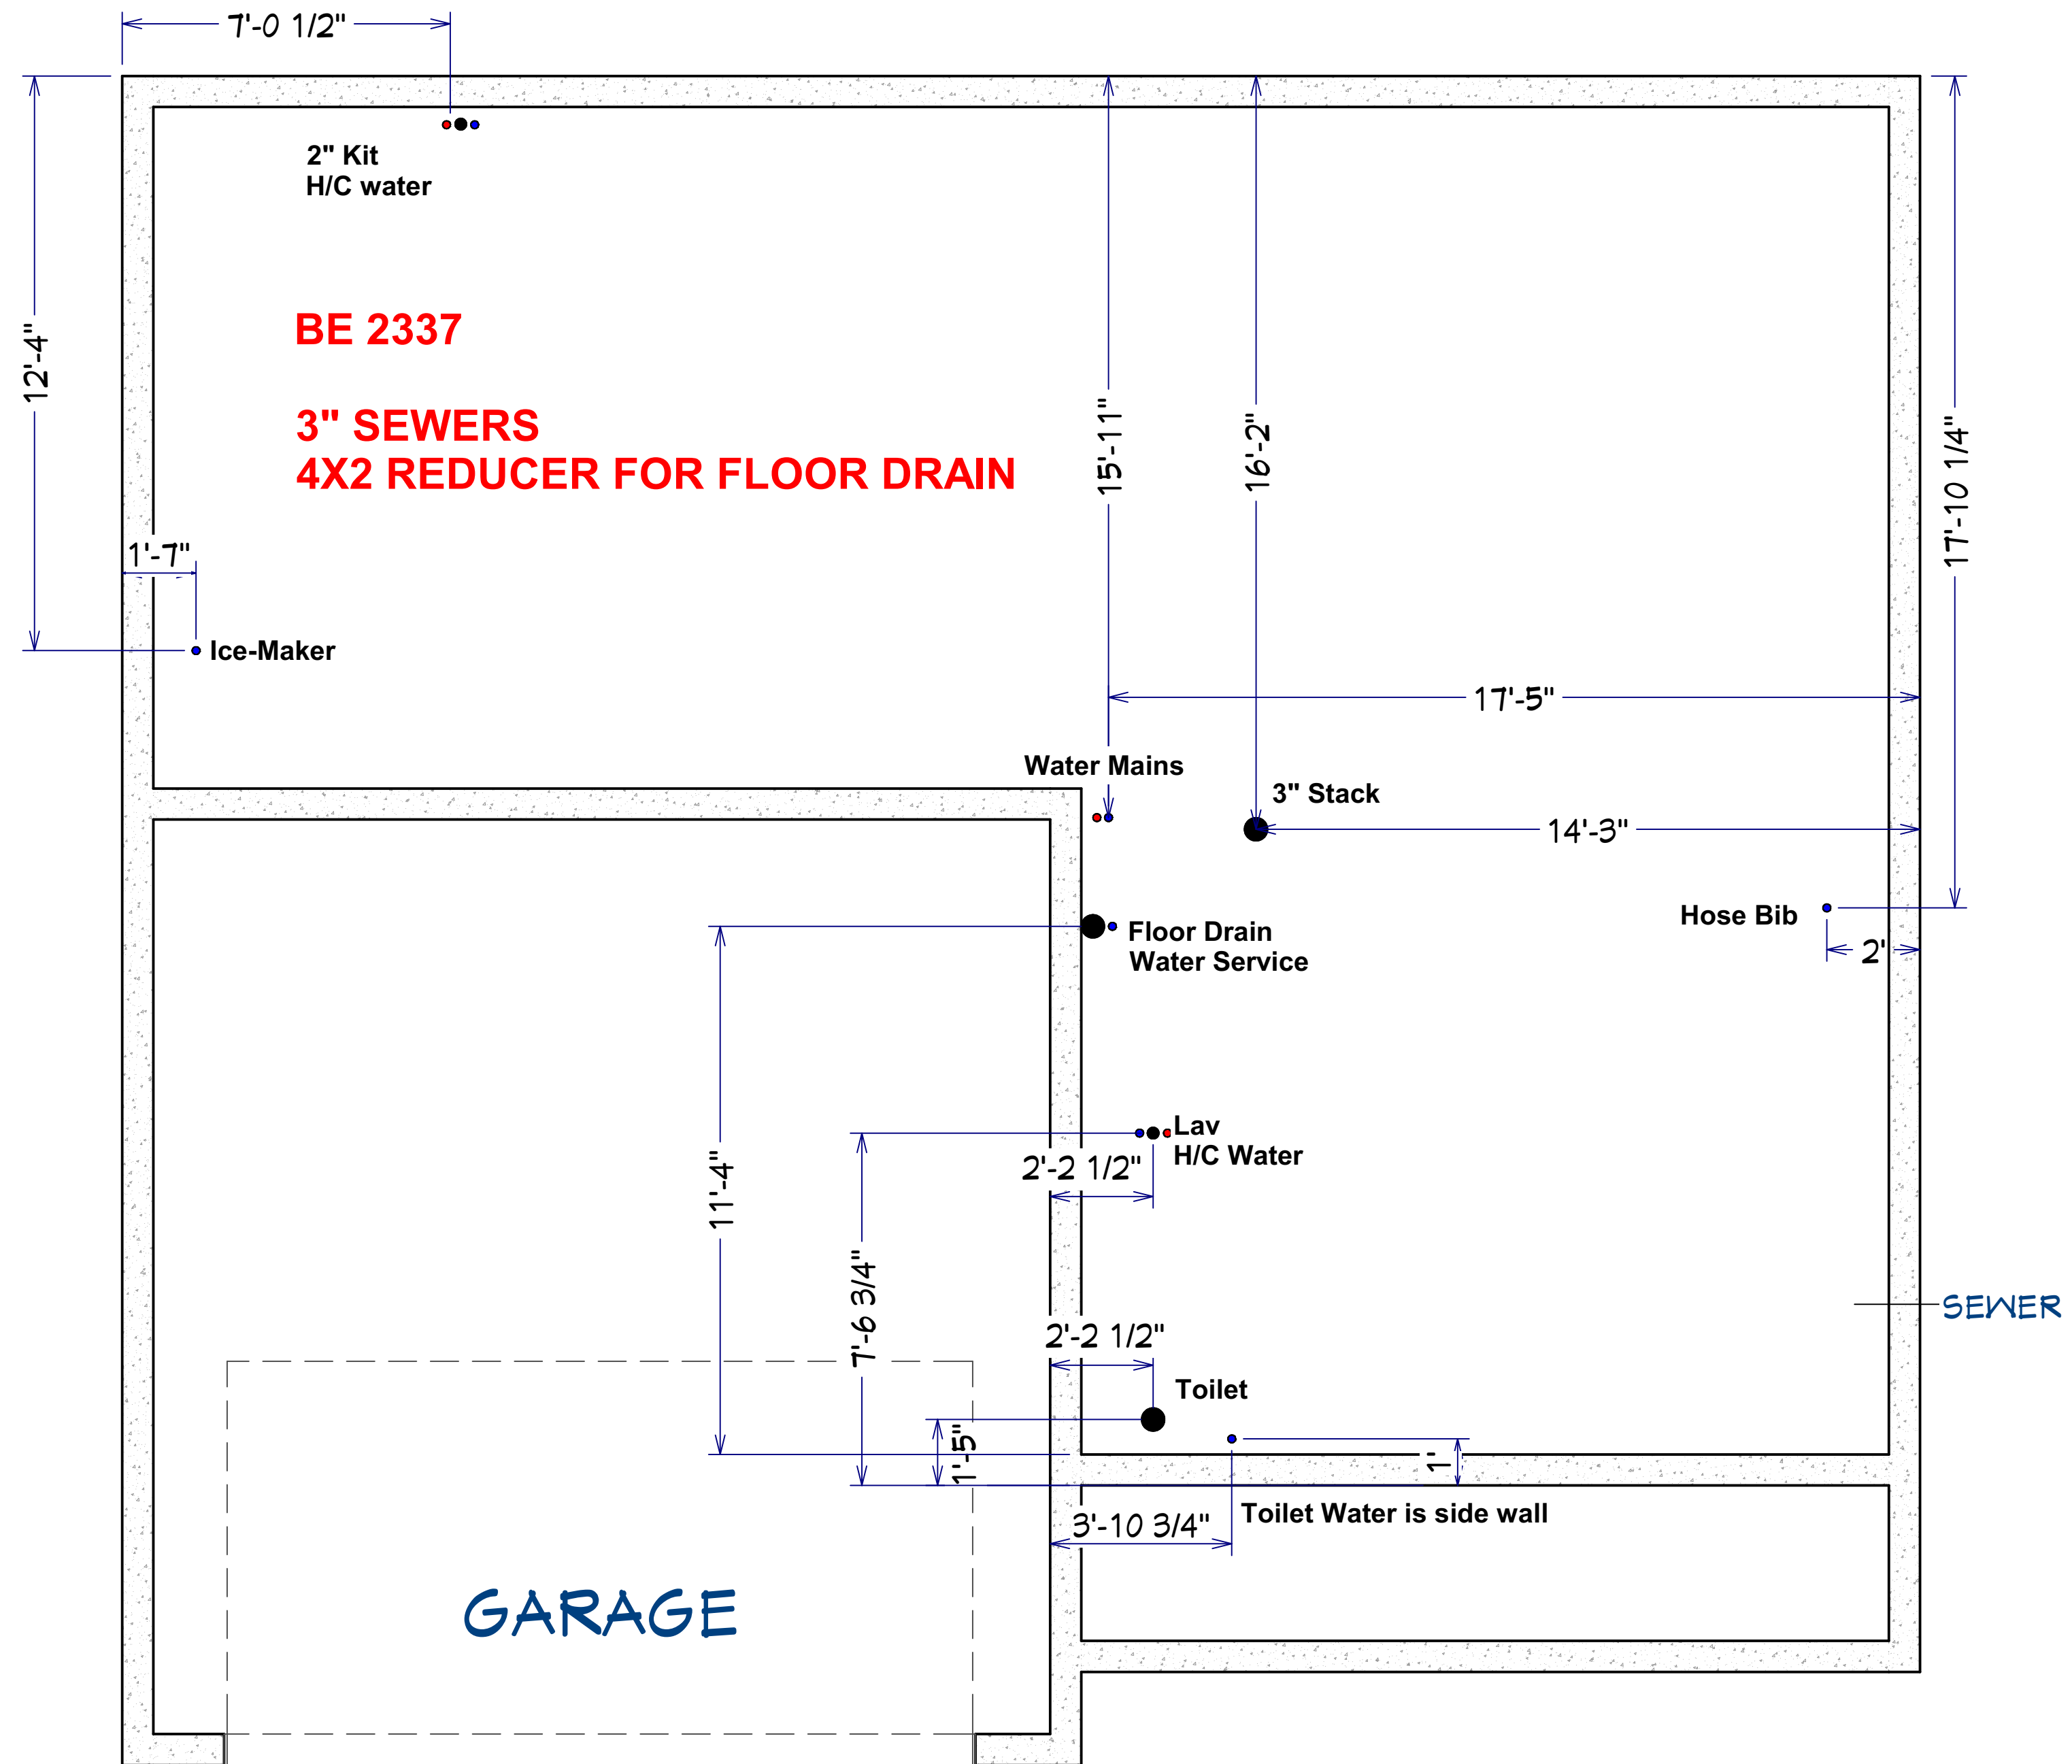

RECHECK FROM POWDER ROOM MEASUREMENTS IN CASE OF BRICK FRONT