


ALL MEASUREMENT ARE TAKEN FROM OUTSIDE OF RIM WALL

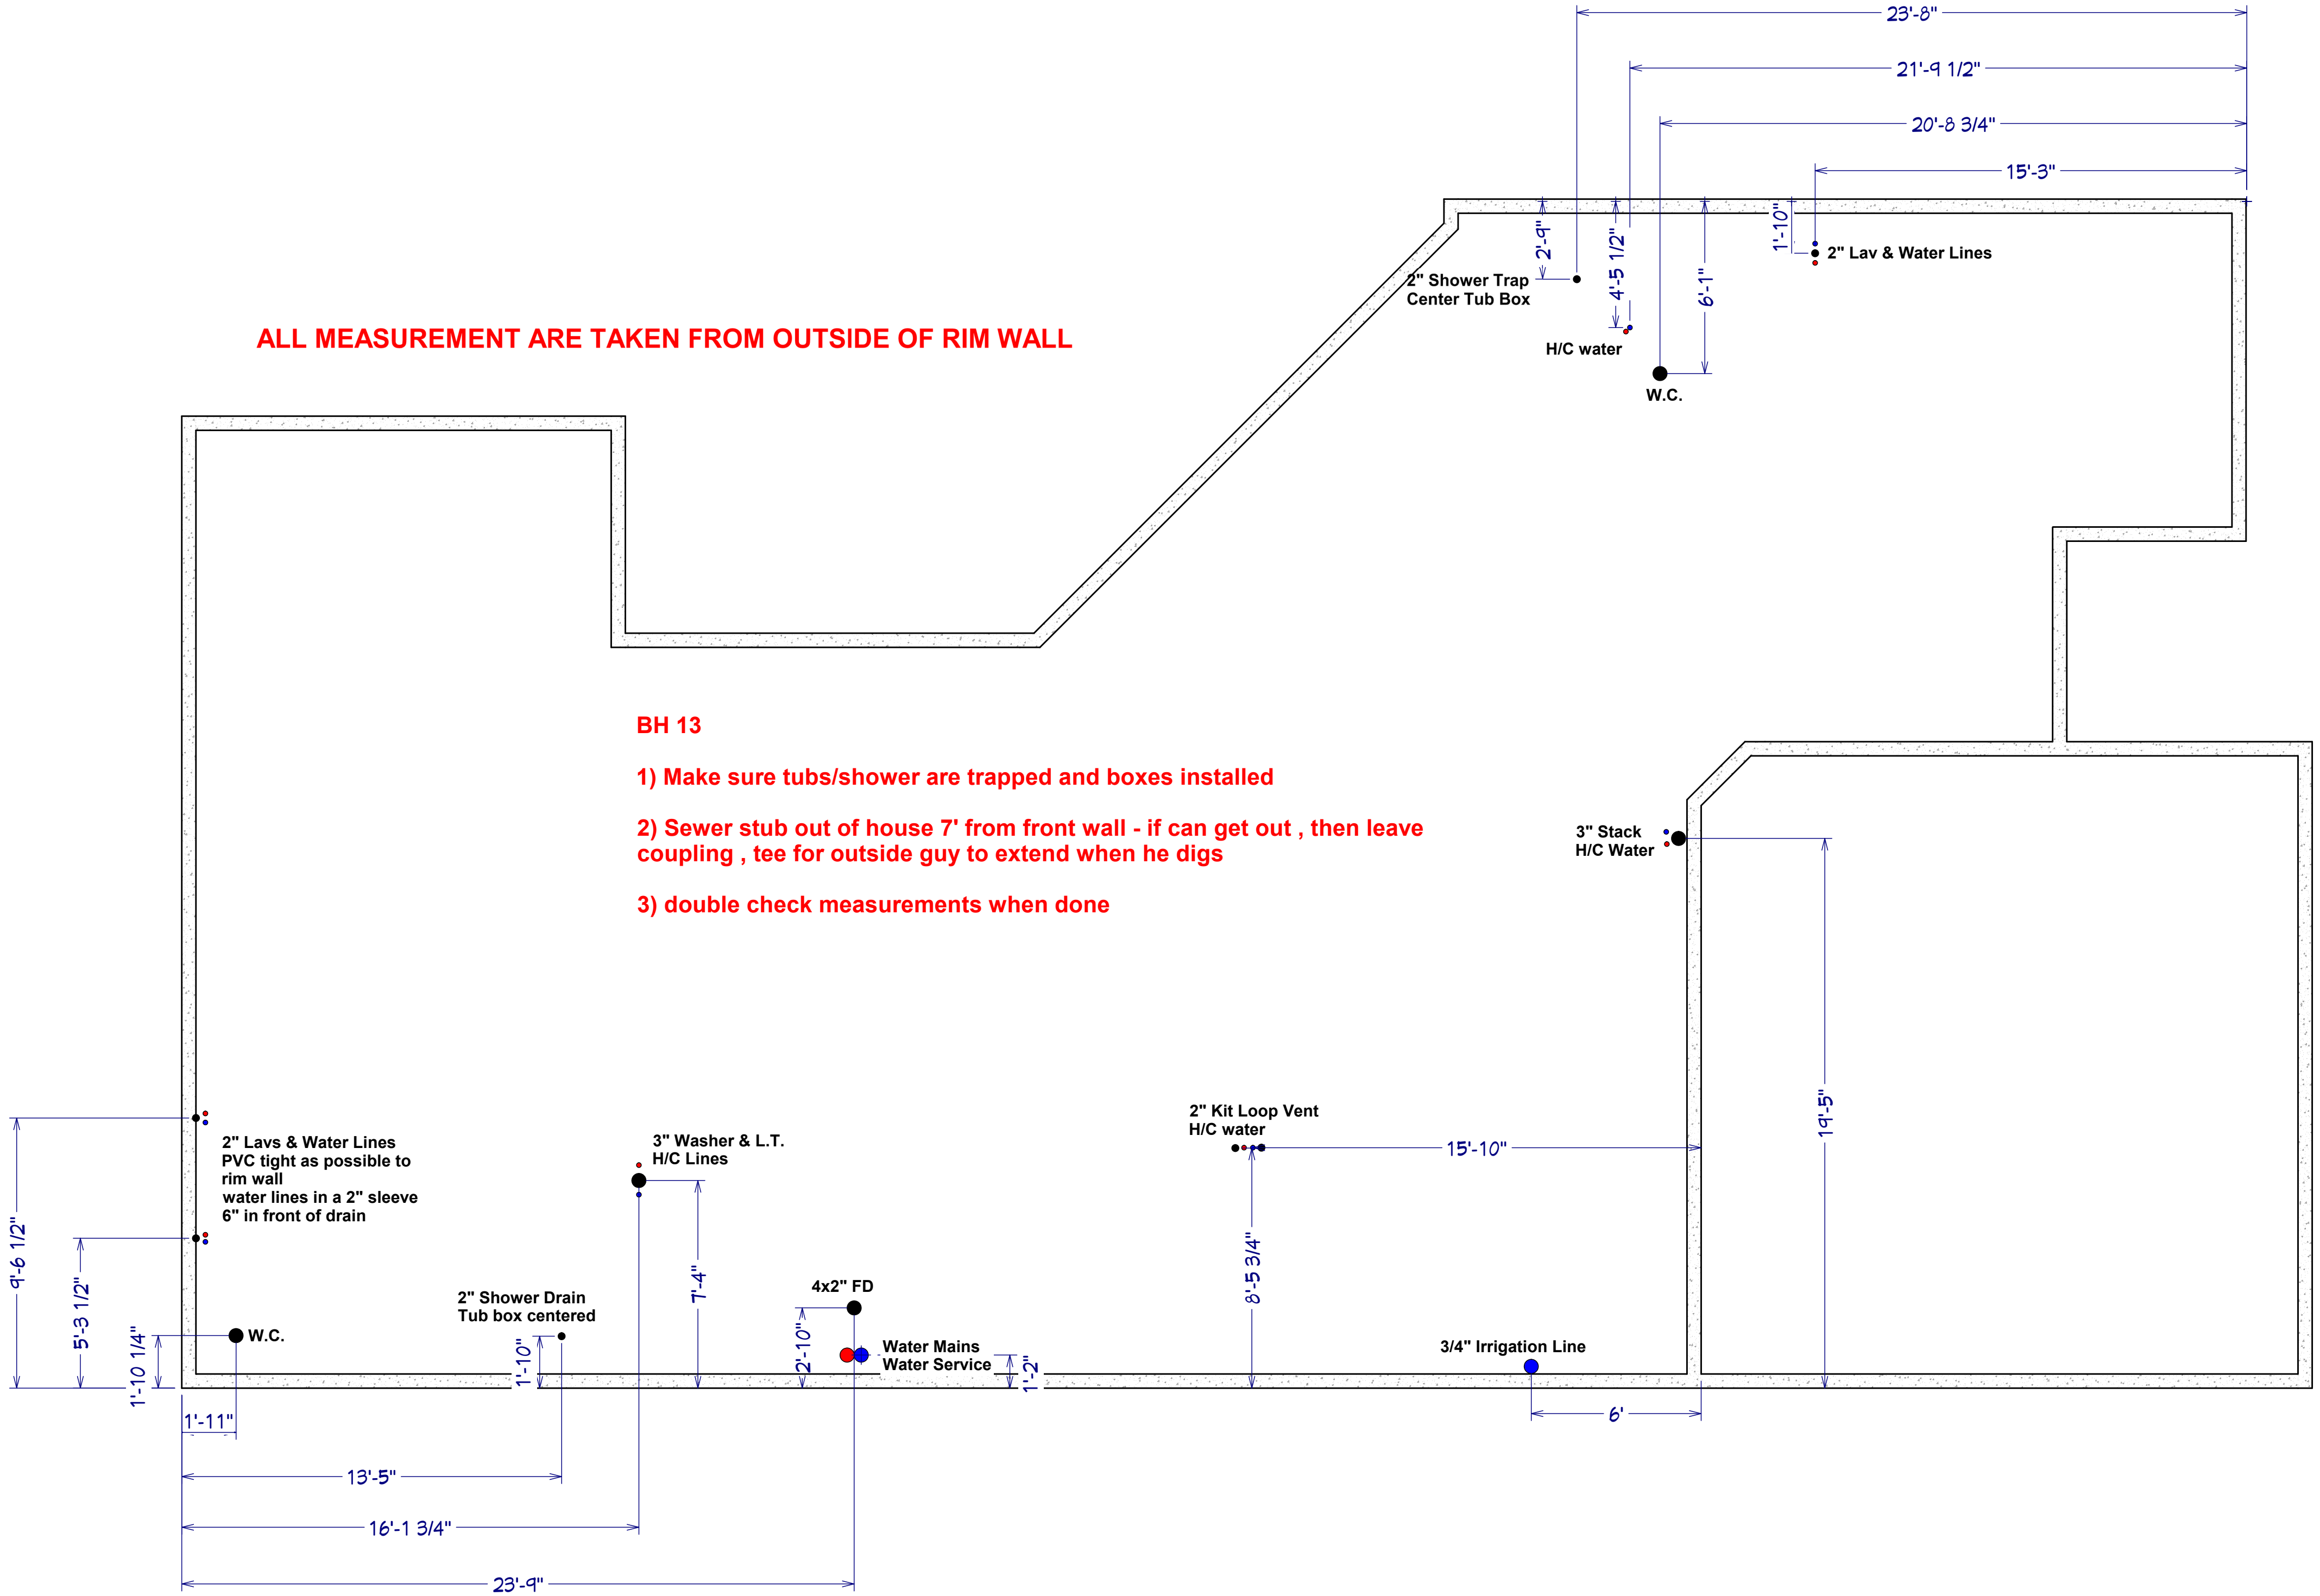

BH 13

- 1) Make sure tubs/shower are trapped and boxes installed
- 2) Sewer stub out of house 7' from front wall - if can get out , then leave coupling , tee for outside guy to extend when he digs
- 3) double check measurements when done