




Breezewood Left PVC

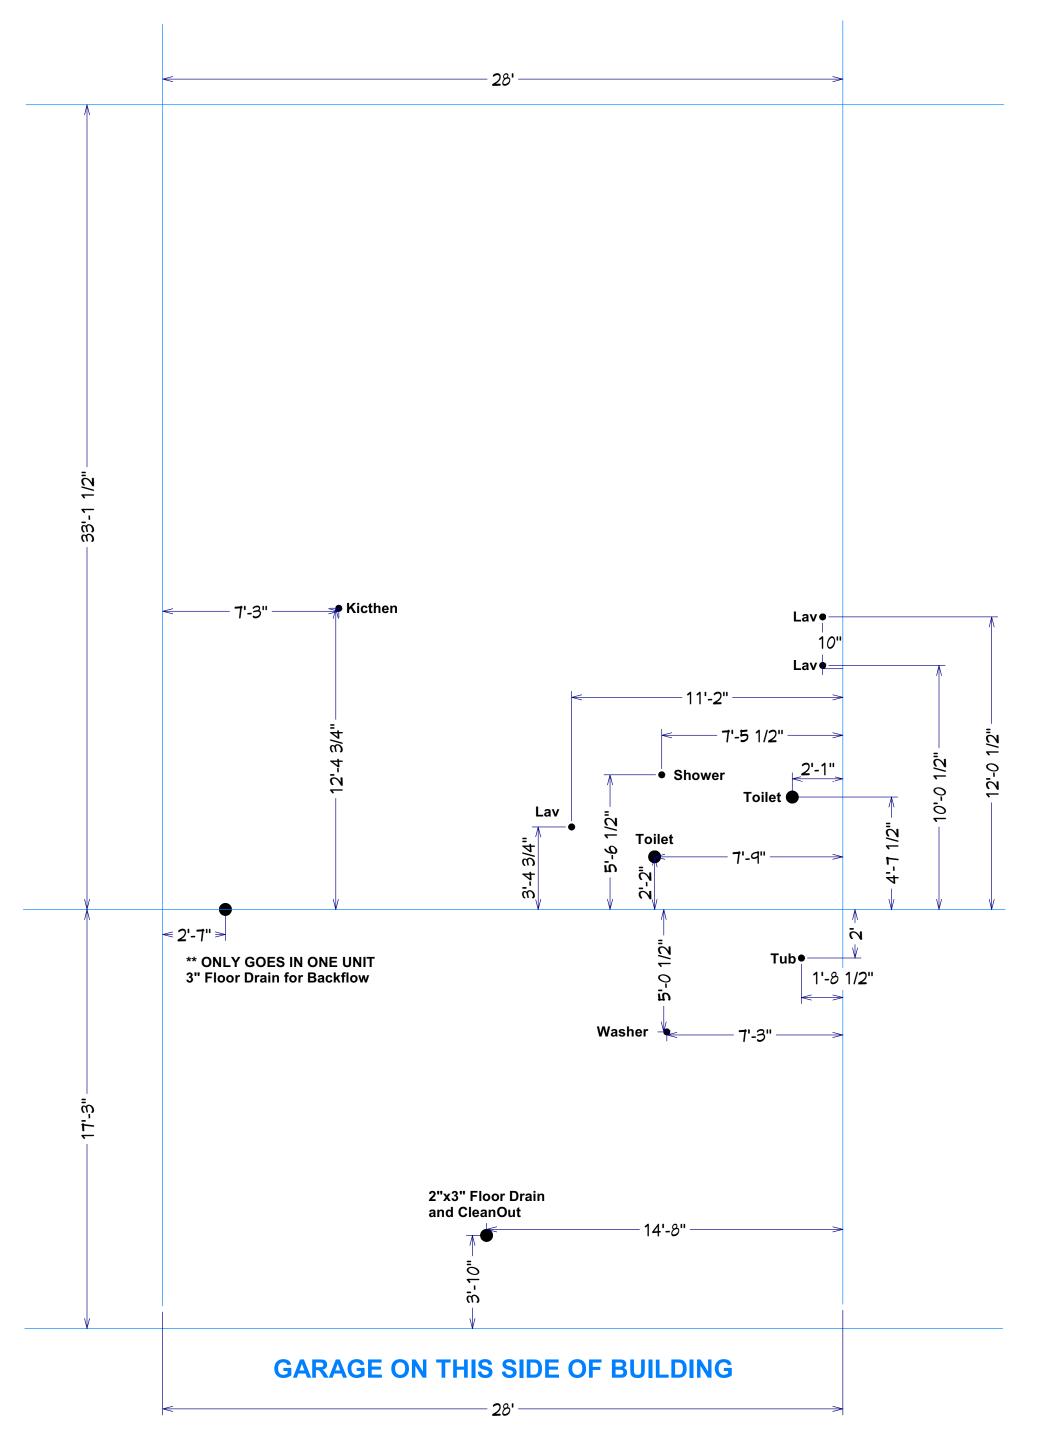


NOTES:


MUST install tub boxes for tub and shower traps !! Wait until gravel prepped

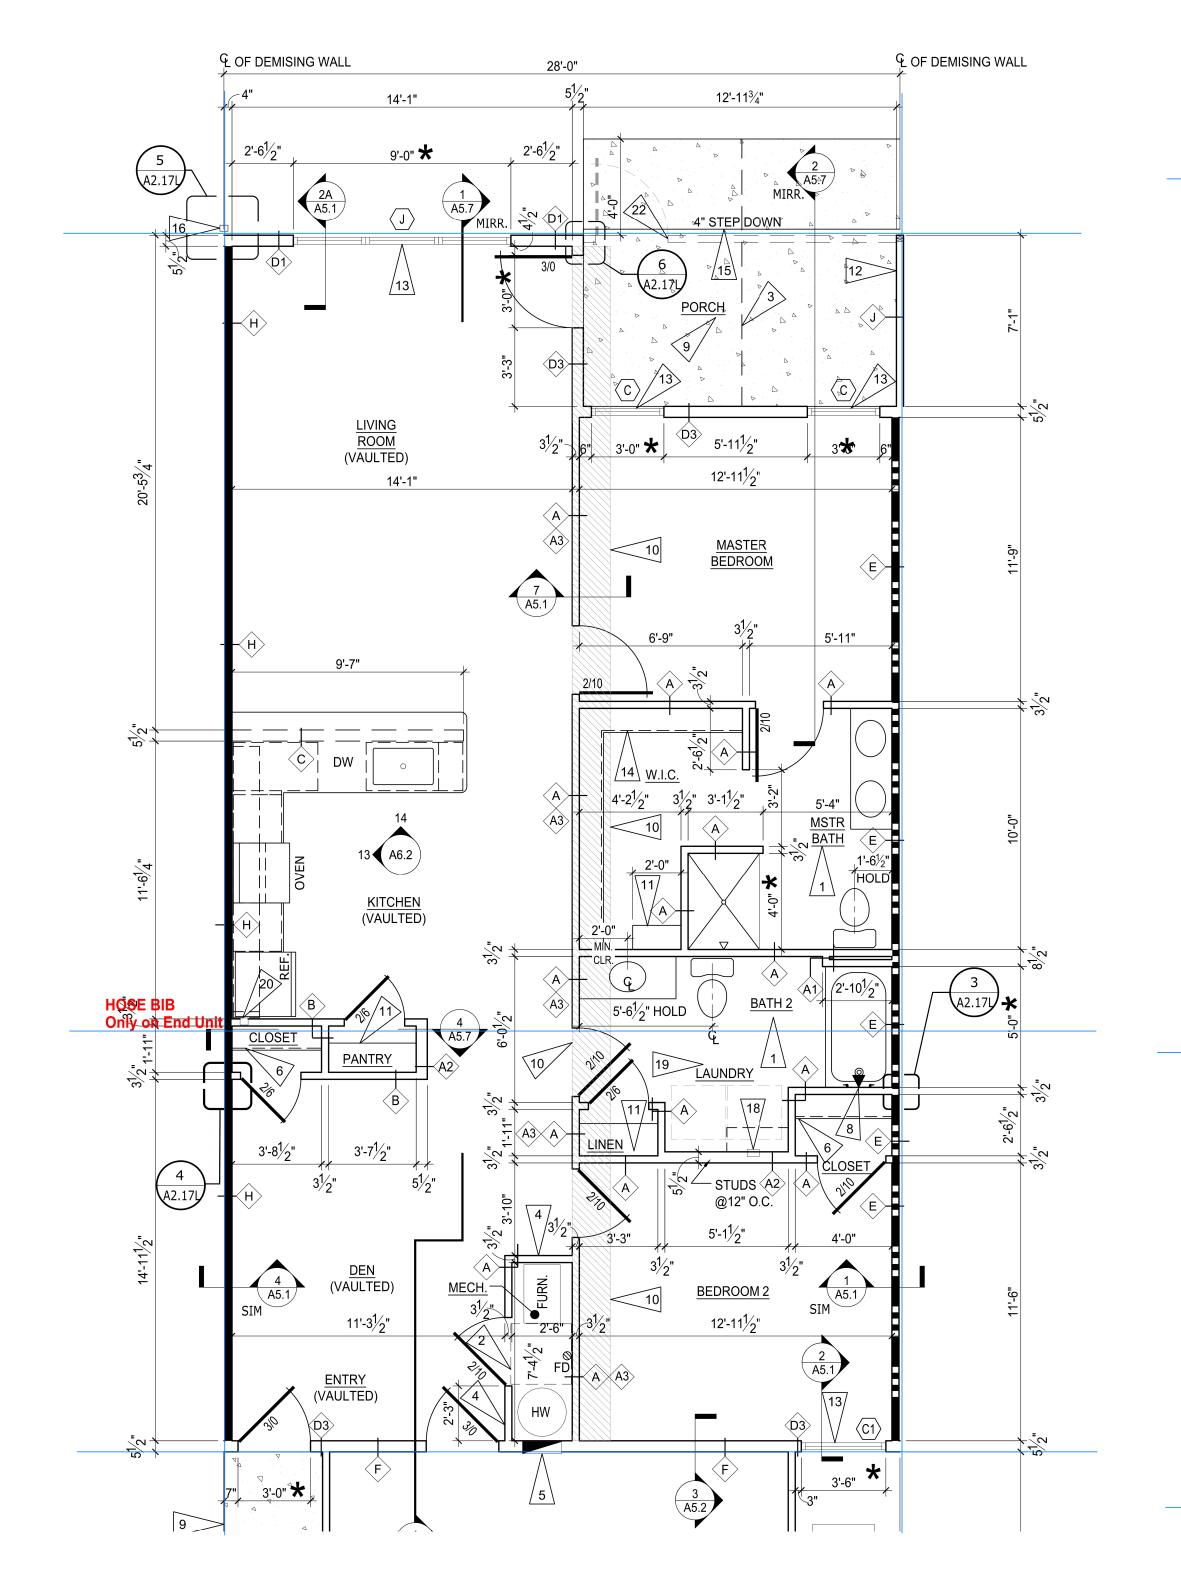

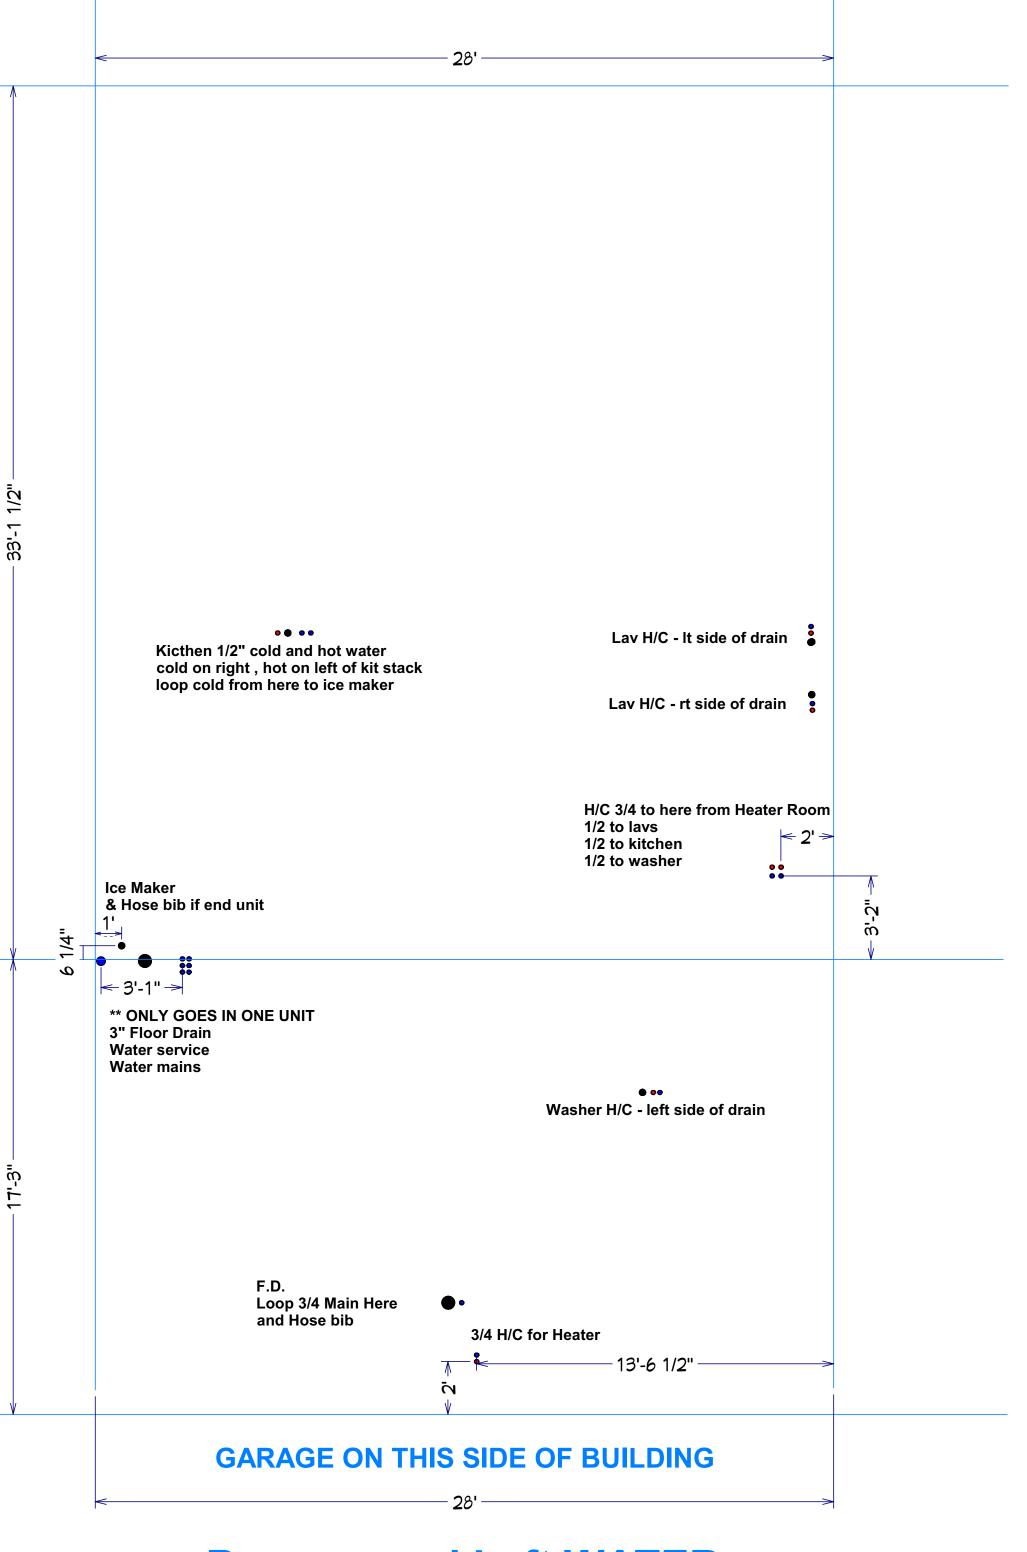



Breezewood Left WATER

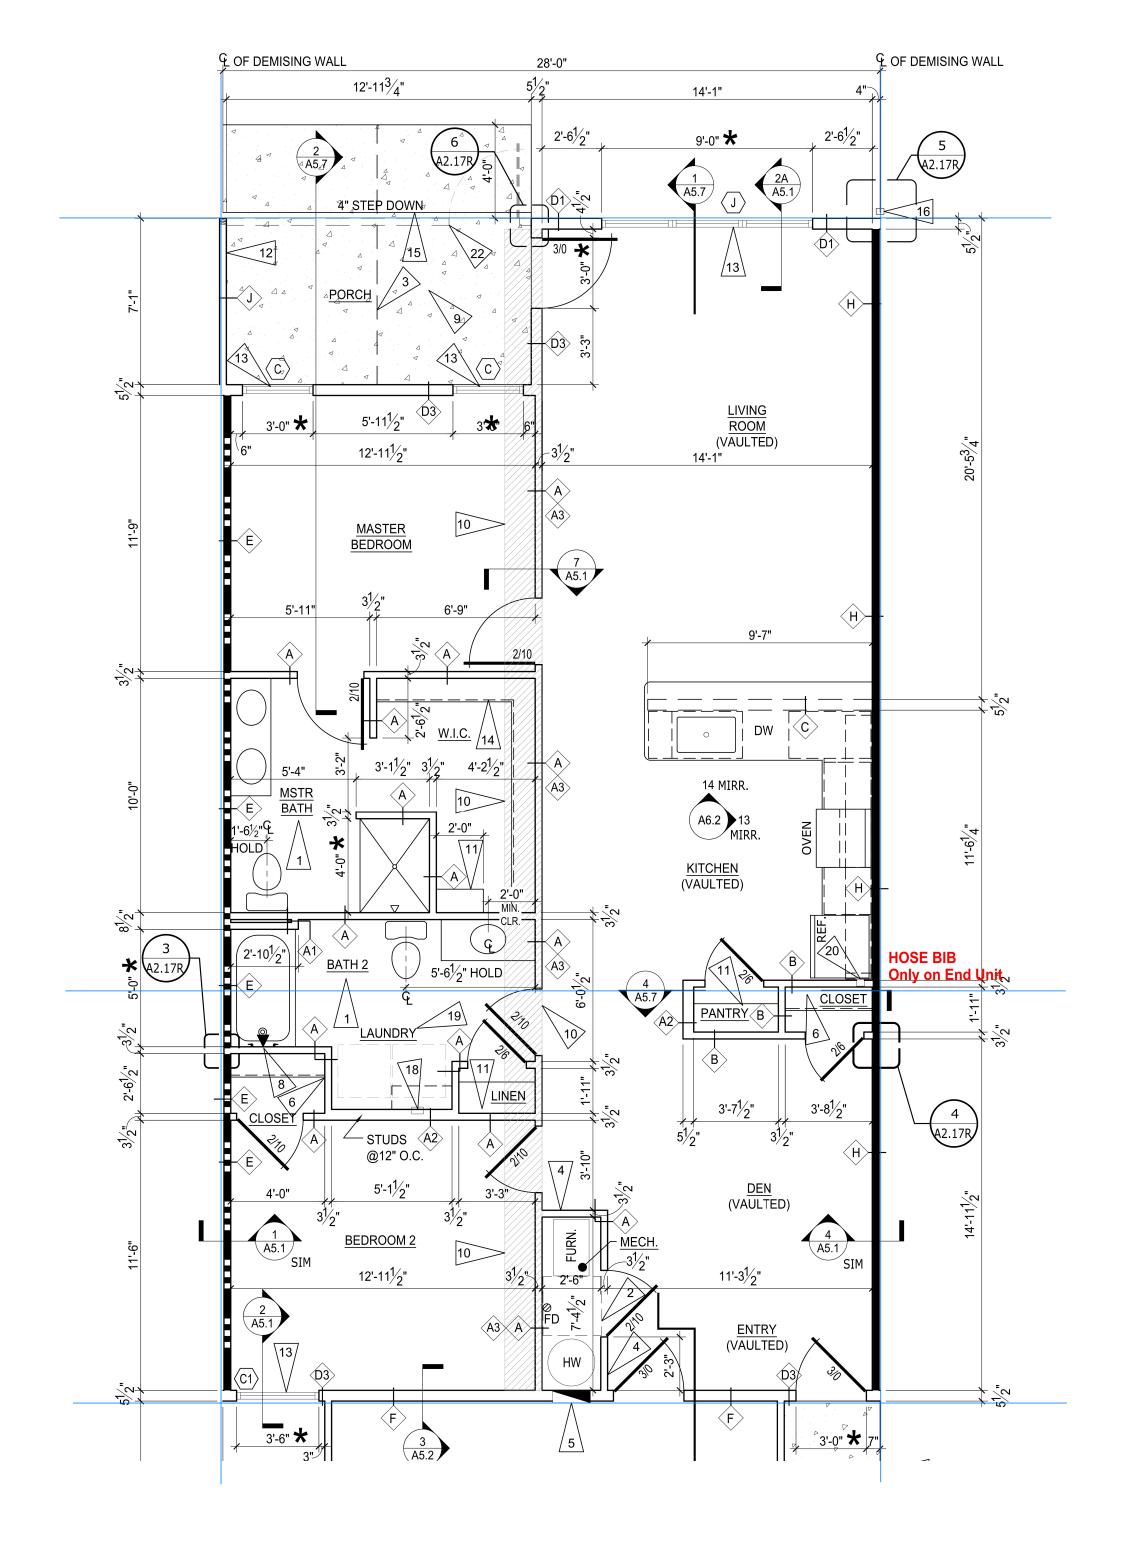

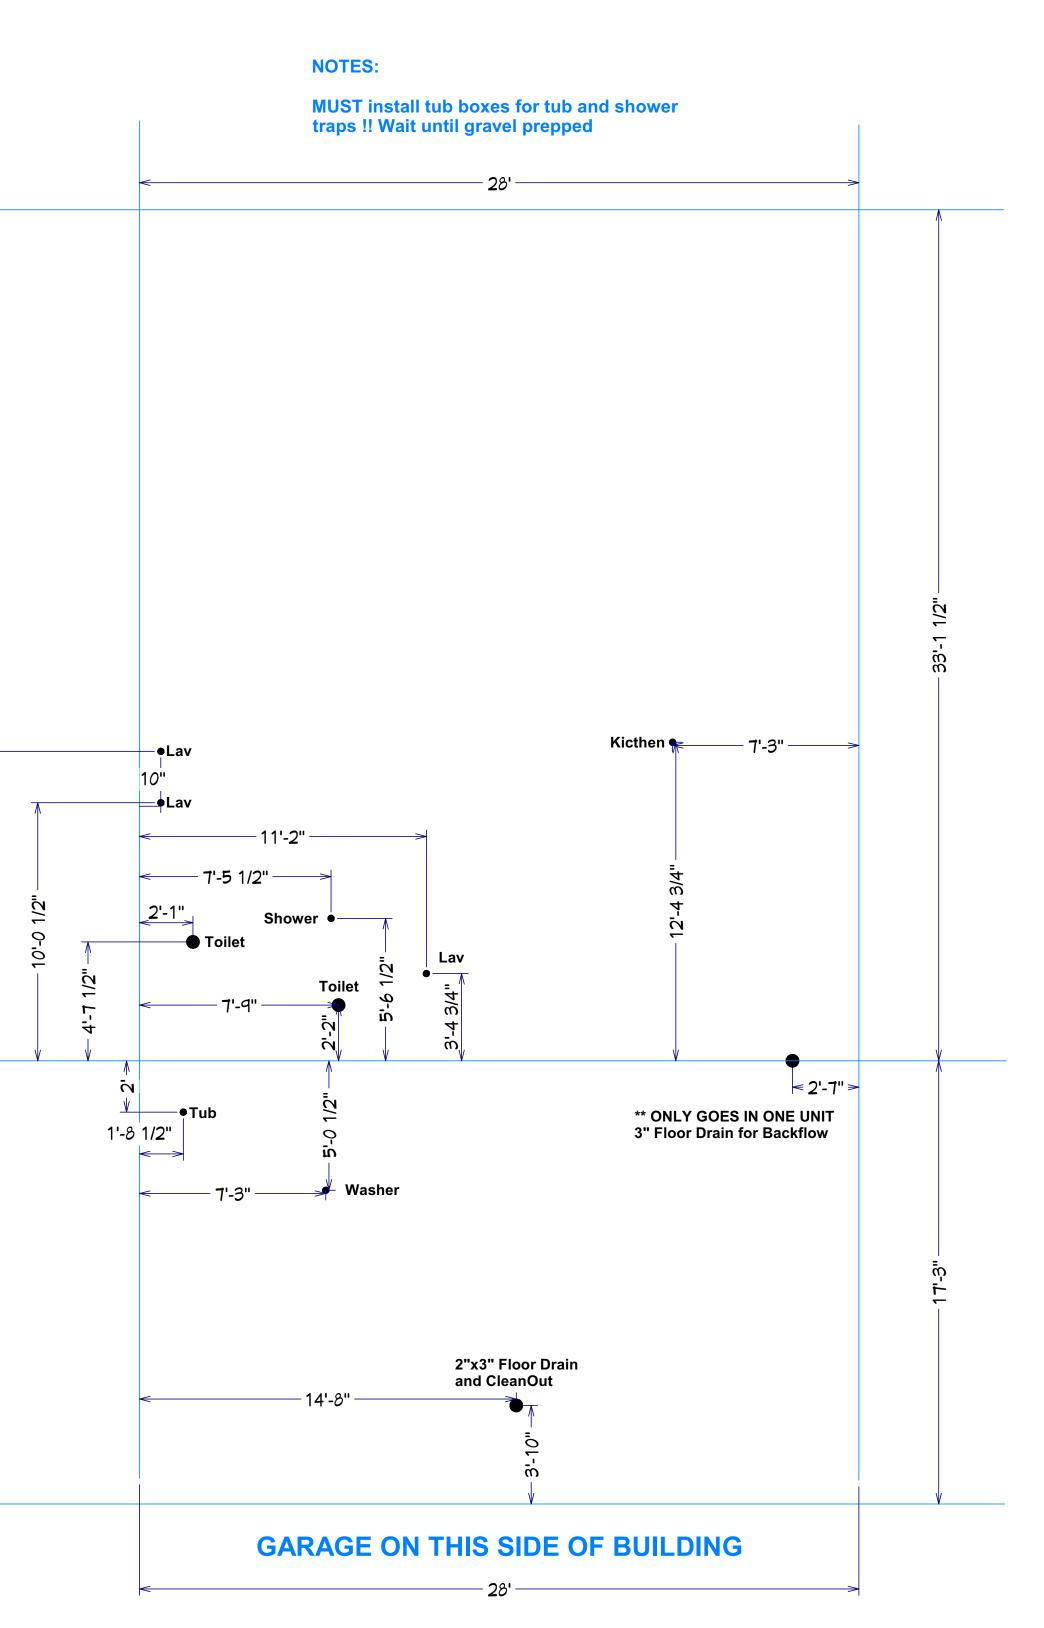


Breezewood Right PVC

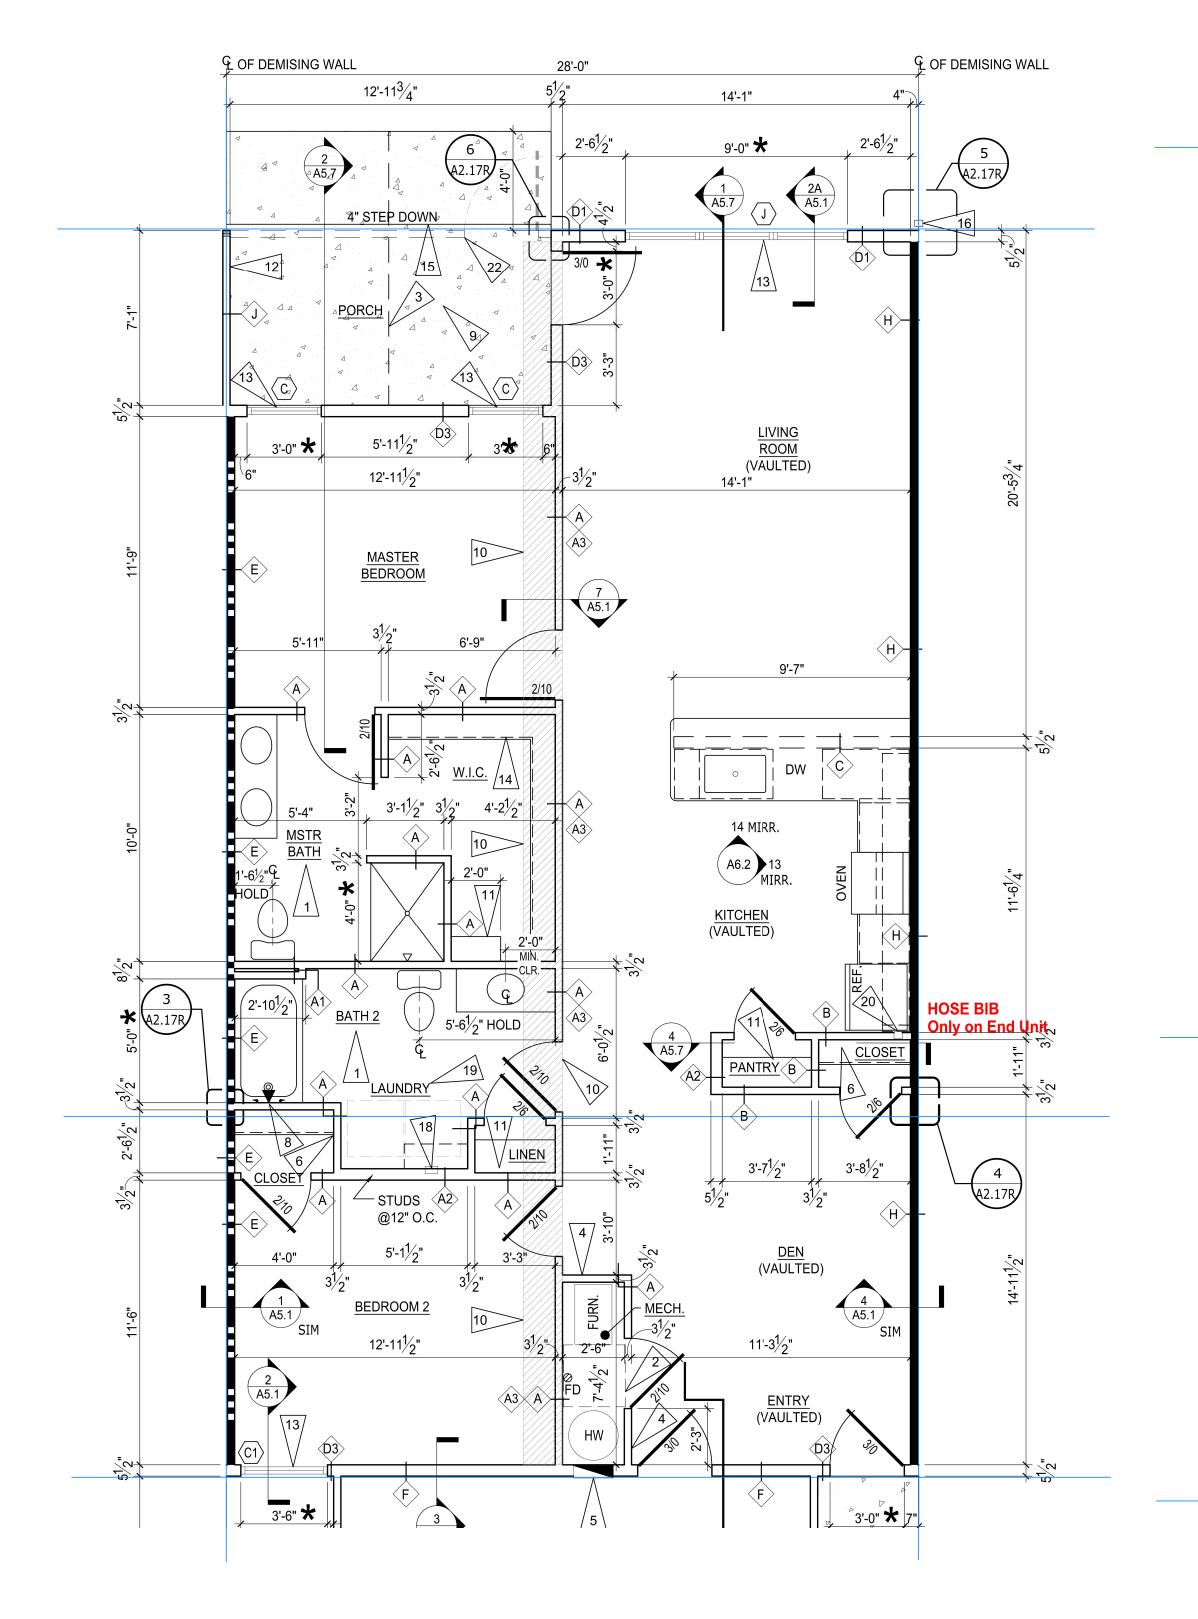

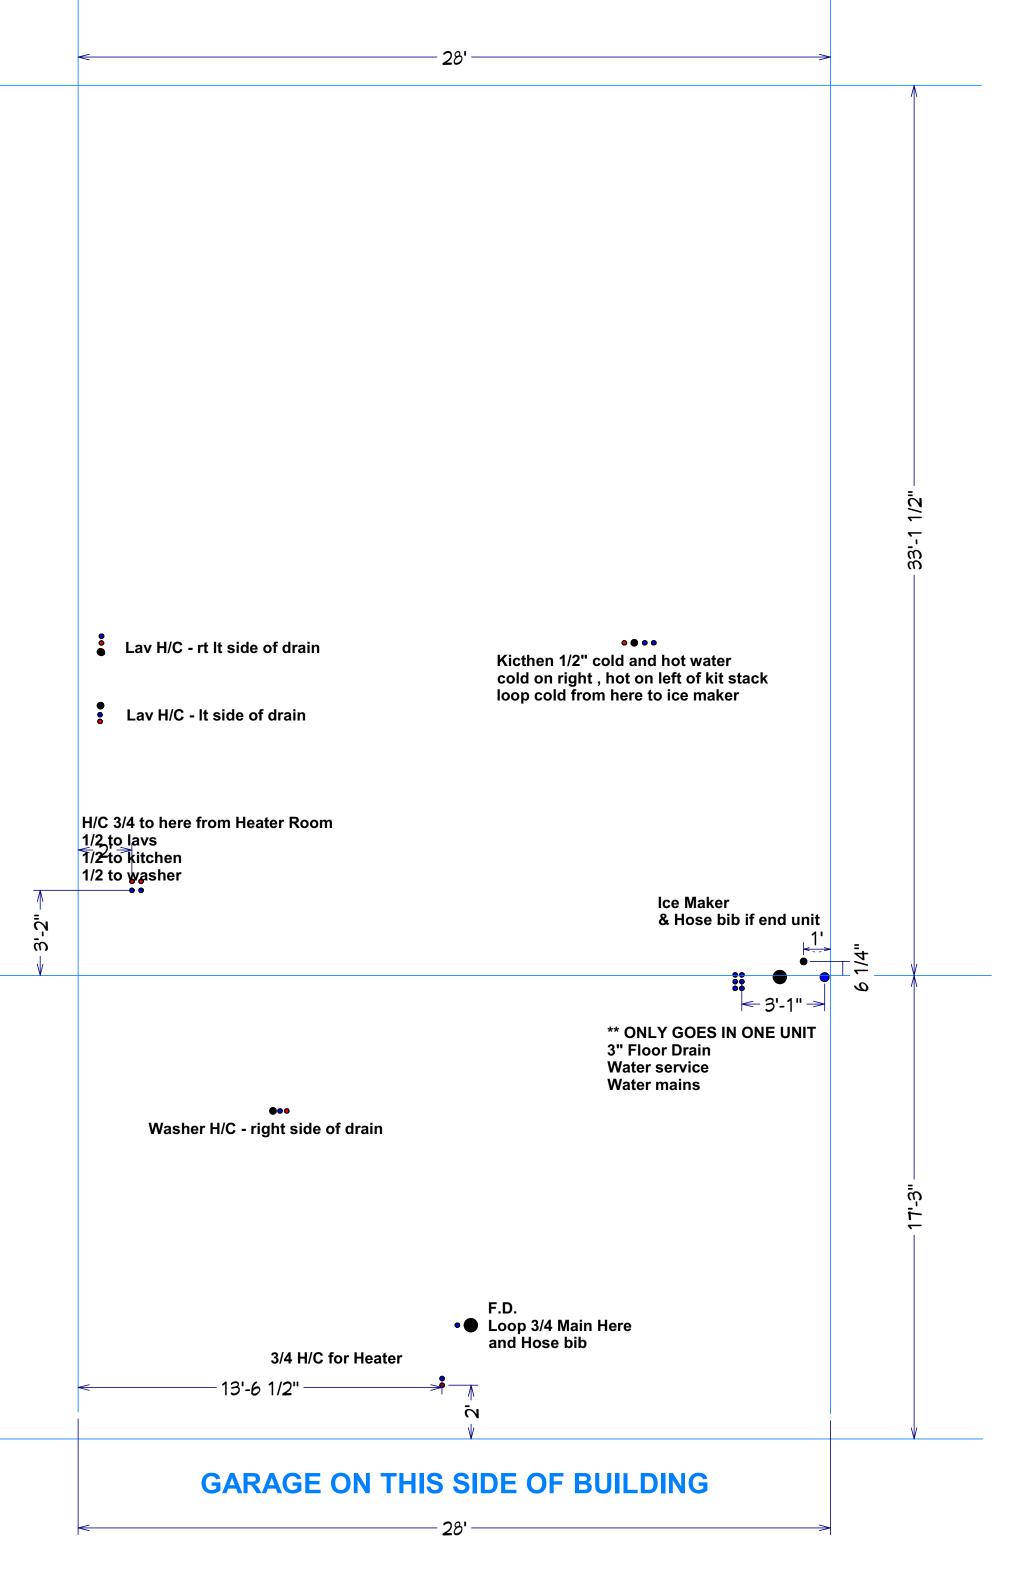


Breezewood Right WATER

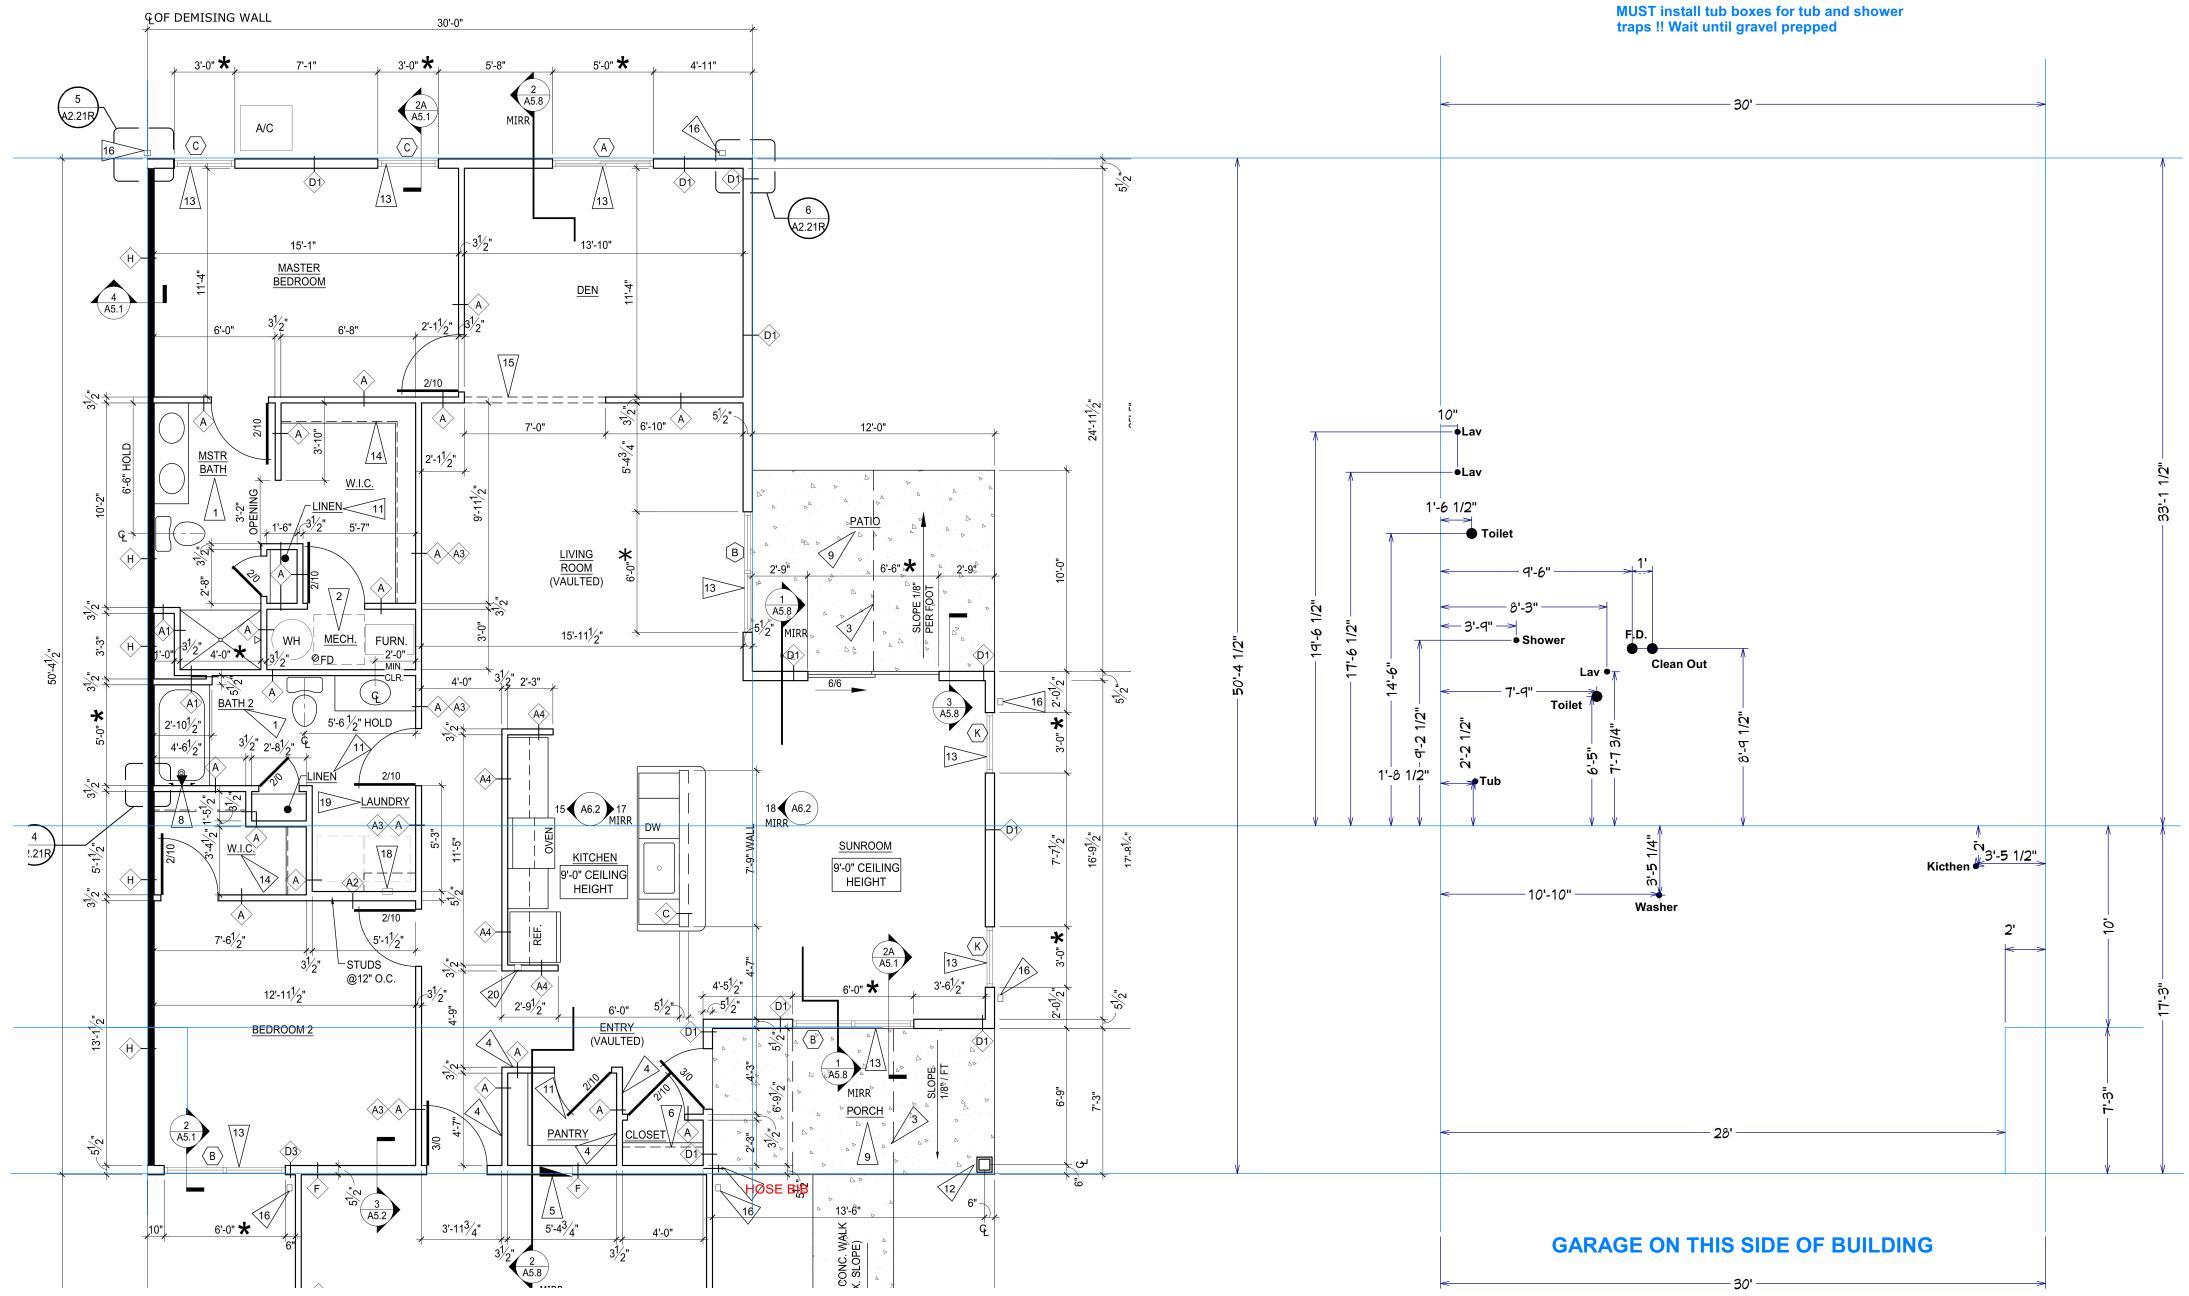

Breezewood Sunroom Right PVC

NOTES:

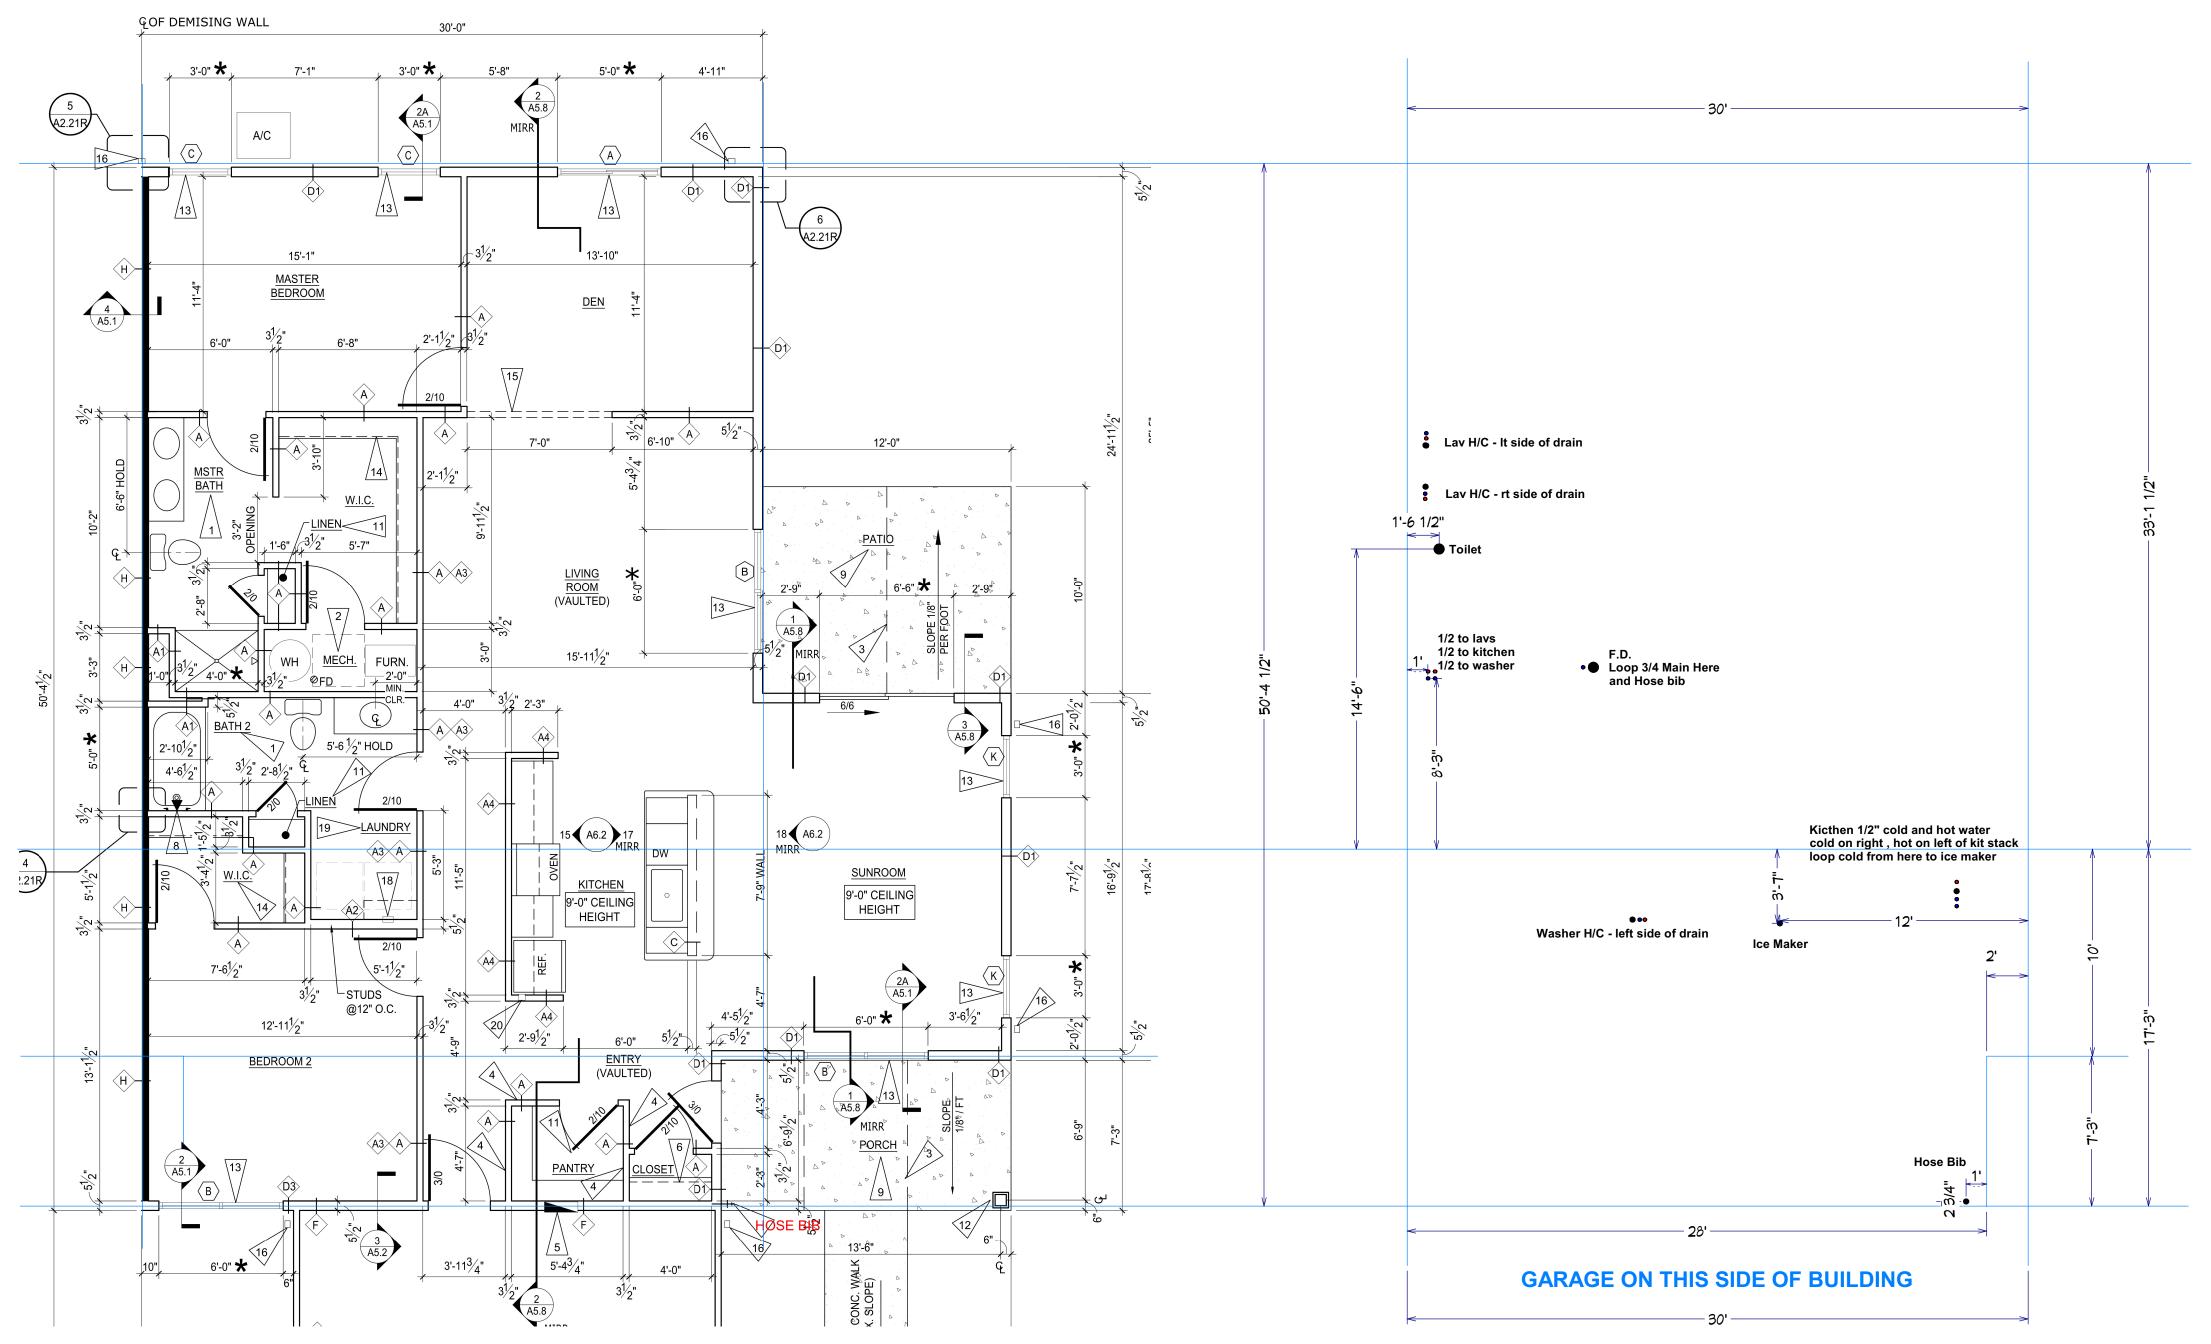

Breezewood Sunroom Right WATER