


MAKE SURE SUMP INSTALLED
ALL PVC LINES ASIDE OF ONE
2" RISER CAPPED OFF !!

DOUBLE CHECK BATH AND BAR
MEASUREMENTS WHEN DONE SO
THEY ARE EXACT OR CLOSE TO IT

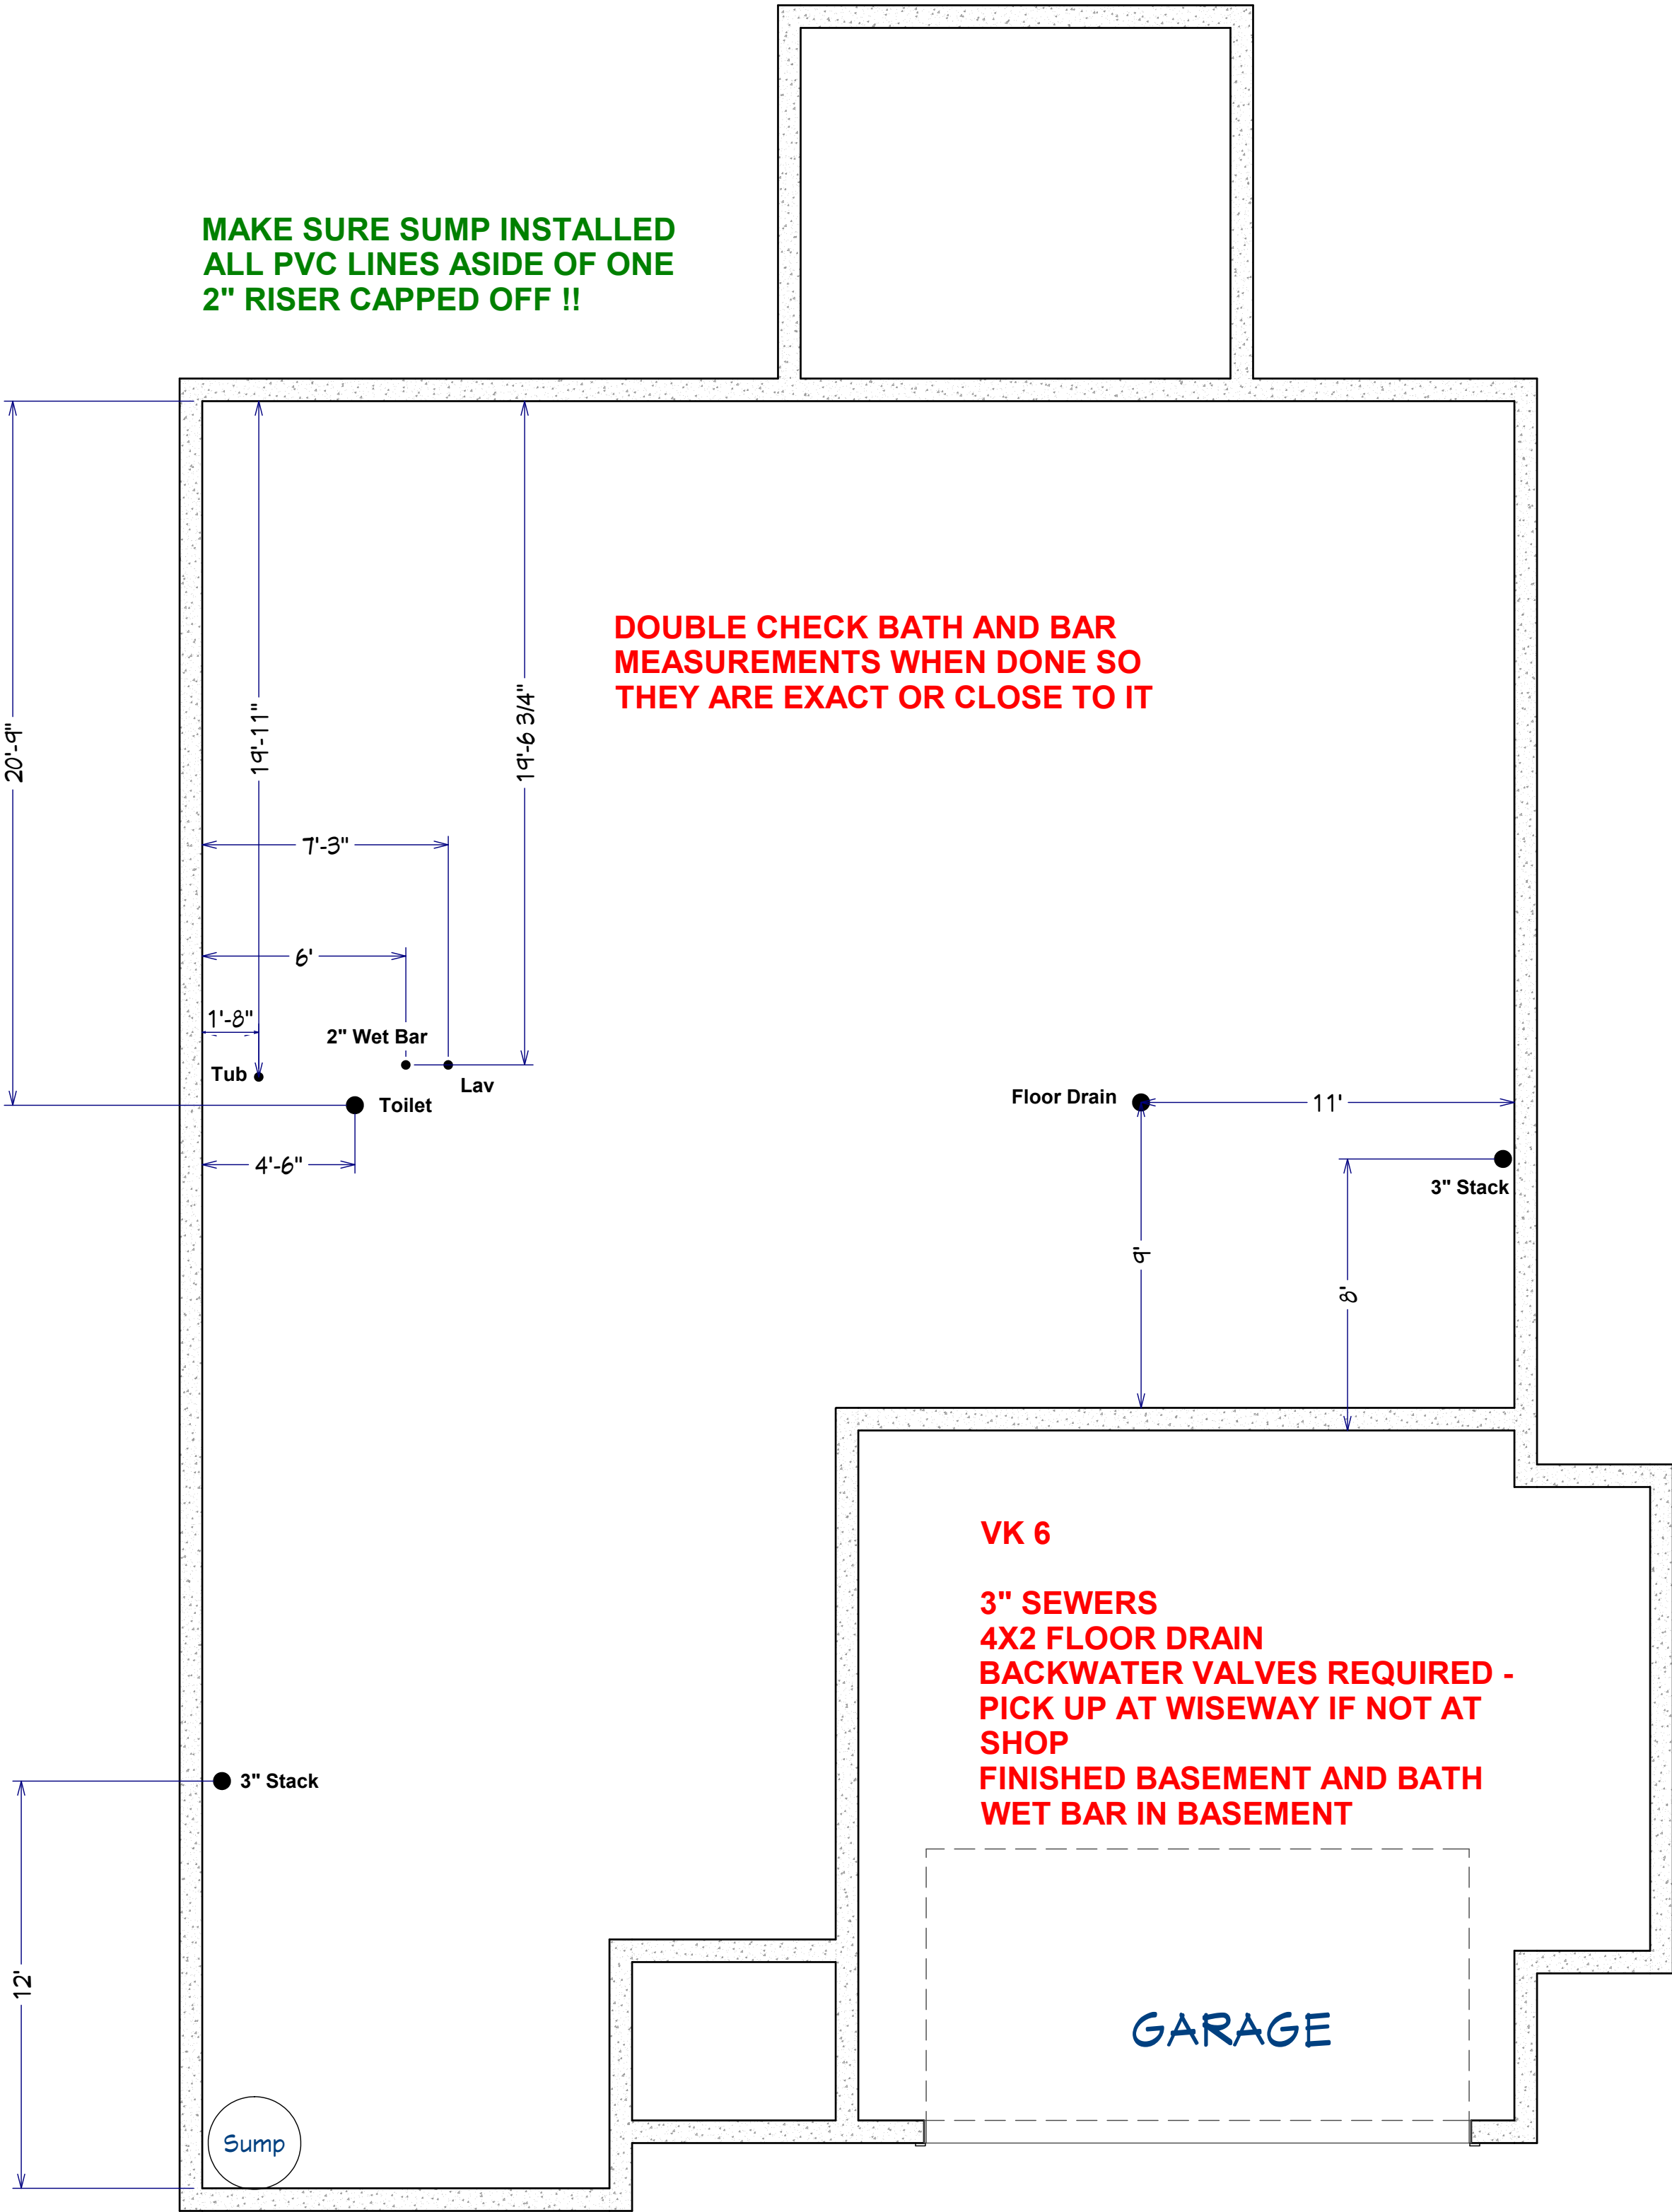

VK 6
3" SEWERS
4X2 FLOOR DRAIN
BACKWATER VALVES REQUIRED -
PICK UP AT WISEWAY IF NOT AT
SHOP
FINISHED BASEMENT AND BATH
WET BAR IN BASEMENT

GARAGE